


## ROLL POSITIONS


Roldiameter  
Diamètre du rouleau  
Roll diameter  
Rollendurchmesser

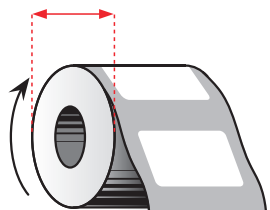

L1 R  
L3 R  
L5 R  
L7 R  
S1 R  
S3 R  
S5 R  
S7 R

Baanbreedte  
Laize du rouleau  
Roll width  
Rollenbreite

Kerndiameter  
Diamètre du mandrin  
Core diameter  
Kernendurchmesser

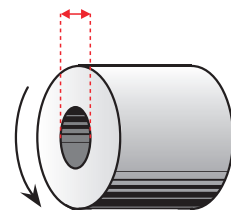

L2 R  
L4 R  
L6 R  
L8 R  
S2 R  
S4 R  
S6 R  
S8 R

Baanbreedte  
Laize du rouleau  
Roll width  
Rollenbreite

Looprichting  
Sens de débobinage  
Unwind direction  
Laufrichtung

